

# ATM-9202 Periodic Verification Unit



## Instruction Manual

ATM-9202 Periodic Verification Unit is used to verify that the ACM1 Constant Ground Monitors are in proper working order.

### TEST PROCEDURE:

1. Unplug the power supply to the ACM1 unit.
2. Plug the Periodic Verification Unit (PVU) **GROUND** lead (Male Banana Plug) to the common ground at the workstation.
3. Connect the PVU **BENCH** lead (Male Phono Plug) to the ACM1 **BENCH** plug-in.
4. Connect the power supply to the ACM1 power plug-in.
5. The ACM1 bench led should be green.
6. Plug the PVU **OPERATOR** lead (Banana Male Plug) to the ACM1 **OPERATOR** input.
7. Press the **OPERATOR** push button on the PVU and the **OPERATOR** led on the ACM1 should change from a blinking red to green.
8. Release the PVU's **OPERATOR** push button and the **OPERATOR** led on the ACM1 should change to a blinking red, with momentary beeps up to a maximum of 7 to 12 beeps.
9. Press the **BENCH** push button on the PVU and the **BENCH** led on the ACM1 should change to red, with constant beeps.
10. Release the PVU's **BENCH** push button and the **BENCH** led on the CM410 should change to green, with no beeps.
11. If the monitor did not pass as per the test procedure please contact Bokar International Technical Support.



BOKAR International  
10 Enterprise Drive  
Carbondale, PA 18407, USA

Tel: (570) 842-2812 Fax: (570) 842-4290 E-mail: [bokar@bomir.com](mailto:bokar@bomir.com)

[www.bokar.com](http://www.bokar.com) [www.SMT-tool.com](http://www.SMT-tool.com) [www.ESDmeters.com](http://www.ESDmeters.com) [www.ESDpackaging.com](http://www.ESDpackaging.com)  
[www.assembly-smt.com](http://www.assembly-smt.com) [www.SMTpreheater.com](http://www.SMTpreheater.com) [www.SMTrepair.com](http://www.SMTrepair.com) [www.no-stat.com](http://www.no-stat.com)

US Master Distributor: [www.bomir.com](http://www.bomir.com)